


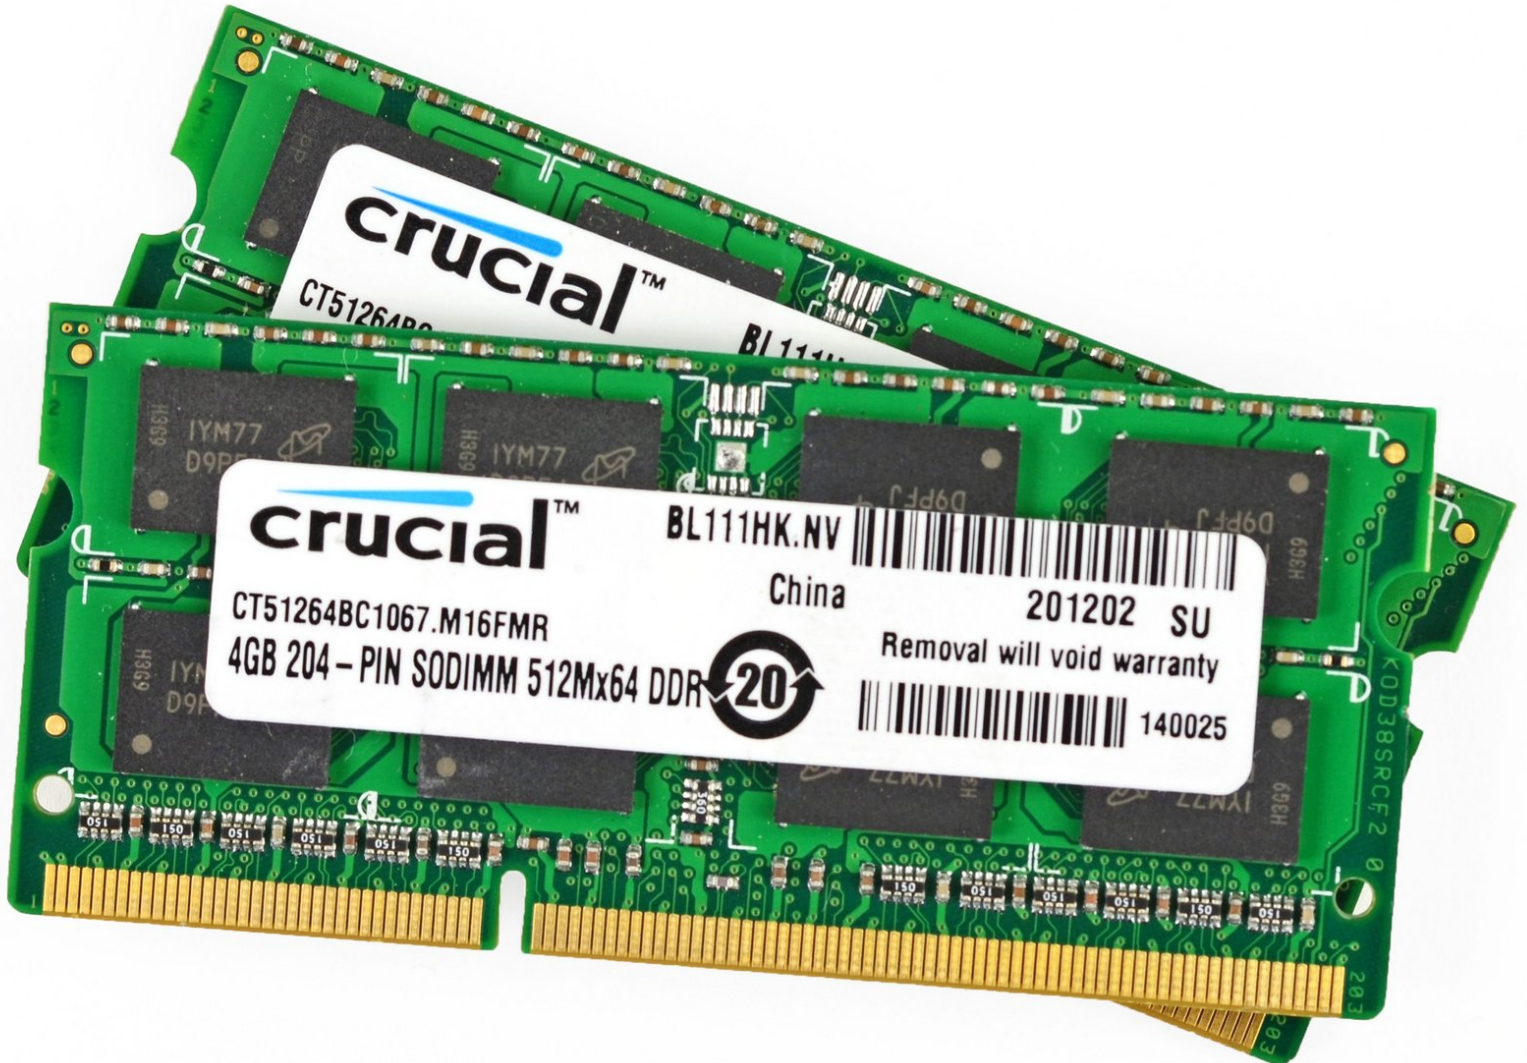

Installing iMac Intel 20" EMC 2266 RAM Installation

Upgrading the RAM in your 20" Intel iMac.

Written By: Dozuki System



INTRODUCTION

Use this guide to replace or upgrade your iMac's RAM for an instant speed boost.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [RAM Upgrade Kit](#) (1)
-

Step 1 — Access Door



- Lay your iMac front side down on a table with the lower edge facing yourself.
- Loosen the single Phillips screw in the center of the access door.
- ⓘ This screw is captive in the access door.
- Remove the access door from your iMac.

Step 2 — RAM Installation



- Use the flat end of a spudger to pull the black plastic RAM tabs out of the memory bay.
- Pull the black plastic RAM tab away from your iMac to eject the RAM module.

Step 3



- Grab the RAM module by its edges and pull it straight out of its slot.
- ⓘ If two RAM modules are installed, repeat this process for the other module.

To reassemble your device, follow these instructions in reverse order.