




iMac Intel 27" EMC 2429 RAM Installation

Replace the RAM in an iMac Intel 27" EMC 2429.

Written By: Dozuki System

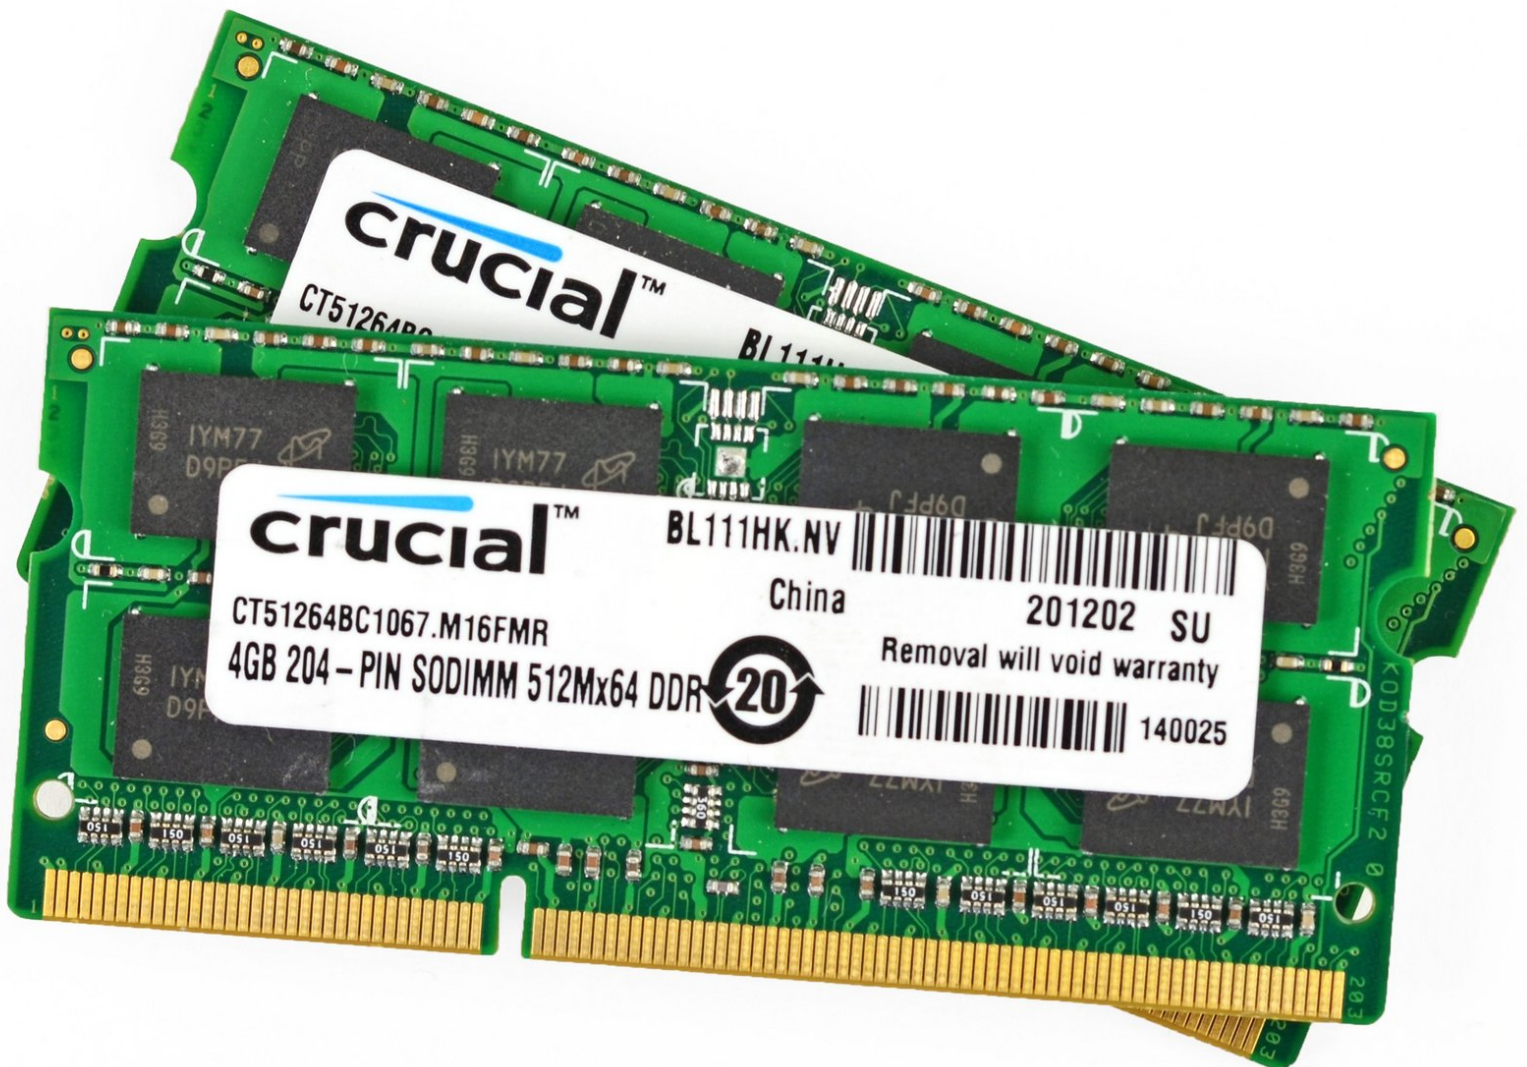

INTRODUCTION

This guide will help you replace the RAM.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
- [Spudger](#) (1)



PARTS:

- [RAM Upgrade Kit](#) (1)
-

Step 1 — Access Door



- Loosen the three Phillips screws securing the access door to the bottom edge of your iMac.
- ⓘ These screws will remain captive in the access door.
- Remove the access door from your iMac.
- 👉 During reassembly, fasten the access door loosely and align it with the pocket cut into the outer case of the iMac before fully tightening the screws.

Step 2 — RAM Installation



- Use your fingers or the tip of a spudger to slide the black plastic RAM tray pull tab out of the RAM slot.

Step 3



- Pull the black plastic tab away from the iMac to eject the RAM module from its socket.
- Use your fingers to slide the RAM module out of its socket.
- ⓘ If necessary, repeat this process for the other RAM modules(s).

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-08 03:00:49 PM.