



Daily Machine Activity

Export your point-by-point Daily Machine Activity in a CSV, Shapefile, or GeoJSON to view in a different system or share with your trusted advisors.

Written By: Support

The screenshot shows the Farmobile Support web application interface. On the left is a navigation sidebar with options: Machines (highlighted with an arrow), Fields, Notes, File Transfer, Reports, Downloads, Inputs, Account, and Farmobile Shop. The main content area is titled 'Farmobile Support' and shows '4 / 8 Online' machines. Below this, there are two sections: 'LIVE' and 'OFFLINE'. The 'LIVE' section lists four active machines with their current status and speed:

| Machine Name | Status | Speed |
|------------------------|------------|---------|
| File Transfer Demo PUC | Operating | 0.2 mph |
| Harvesting Demo PUC | Harvesting | 4.1 mph |
| Planting Demo PUC | Planting | 5.5 mph |
| Spraying Demo PUC | Spraying | 0.0 mph |

The 'OFFLINE' section lists six retired machines with their last activity time:



| Machine Name | Last Activity |
|-------------------------------|---------------|
| Spraying Demo PUC (Retired) | 12h ago |
| Demo PUC 8 | 19h ago |
| Harvesting Demo PUC (Retired) | |
| Planting Demo PUC (Retired) | |

On the right side of the interface is a map of the central United States, showing states like North Dakota, South Dakota, Nebraska, Minnesota, Iowa, and Missouri. Several machine locations are marked with colored pins: an orange pin near Topeka, a blue pin near Des Moines, and several grey pins in the northern states. An 'Export' button is visible at the top of the machine list.

INTRODUCTION



- Provides daily point-by-point machine data within the requested date range.
- Date Range can be one or more days.
- Exporting from the Grower Level, will deliver data for all of your PUCs™ that had Machine Activity within the requested date range.
- Exporting from a selected Machine, will deliver data for only the selected PUC within the requested date range.
- All point-by-point exports follow these steps:
 - Request Export: Farmobile will begin processing the request and email you once ready.
 - Recieve Email: Farmobile will email you once the download is available. The link will take you to the Downloads page of Farmobile DataEngineSM
 - Download File: Your requested data will be listed on the Downloads page for you to download.

Step 1 — Select Machines from the Farmobile DataEngineSM Menu

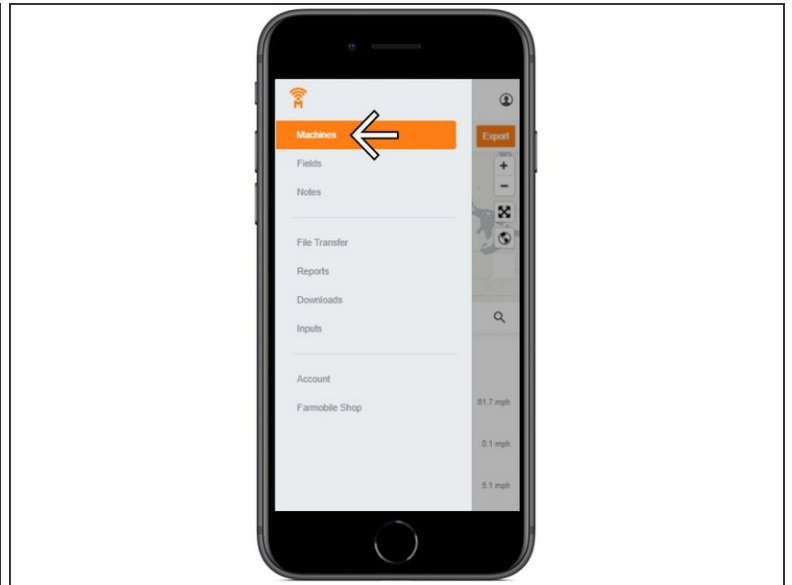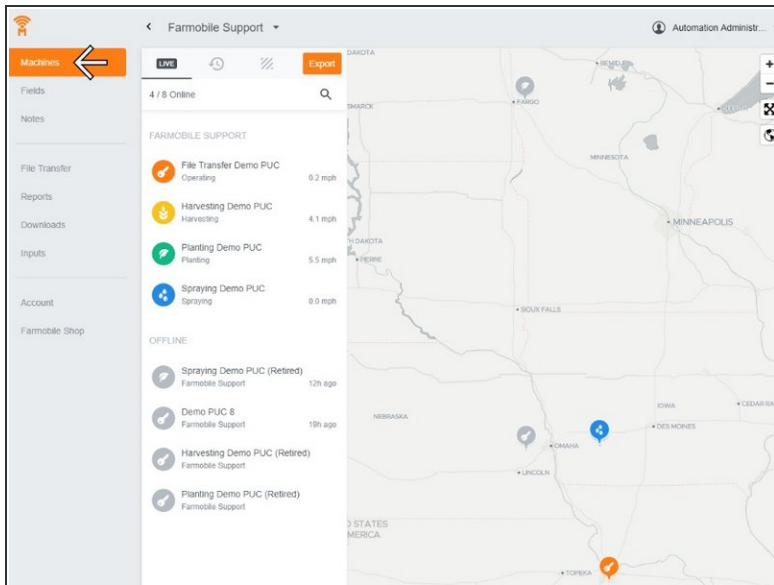


- Selecting Machines from the Farmobile DataEngine menu will open the Machines page with all of your PUCs listed and displayed on the map.

Step 2 — Select Export

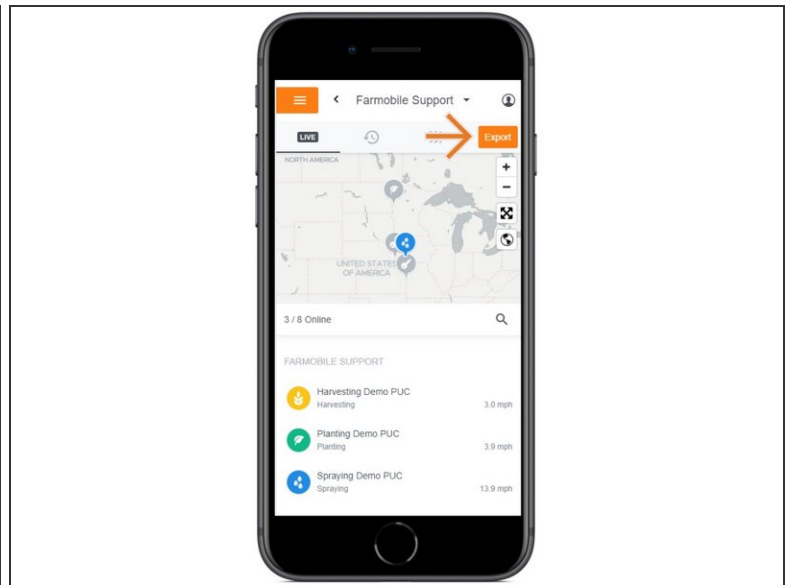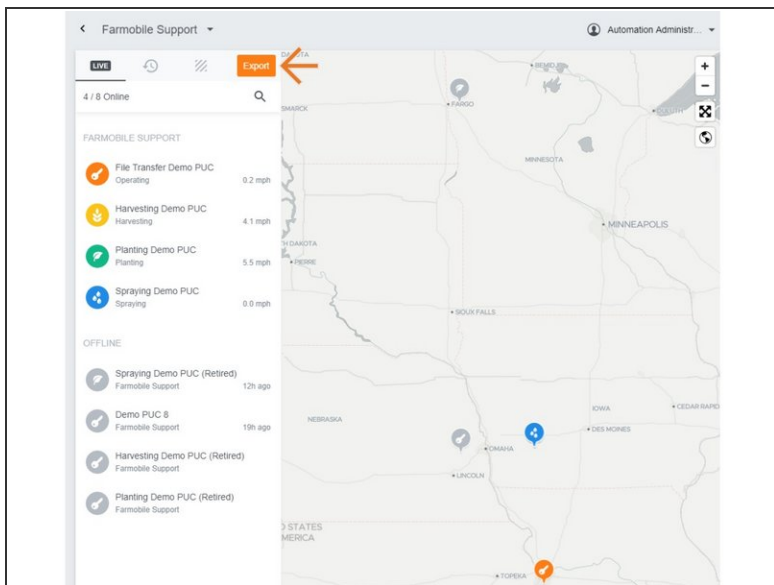


- Selecting Export will open the Export Machine Data window.

Step 3 — Enter Details and Select Export

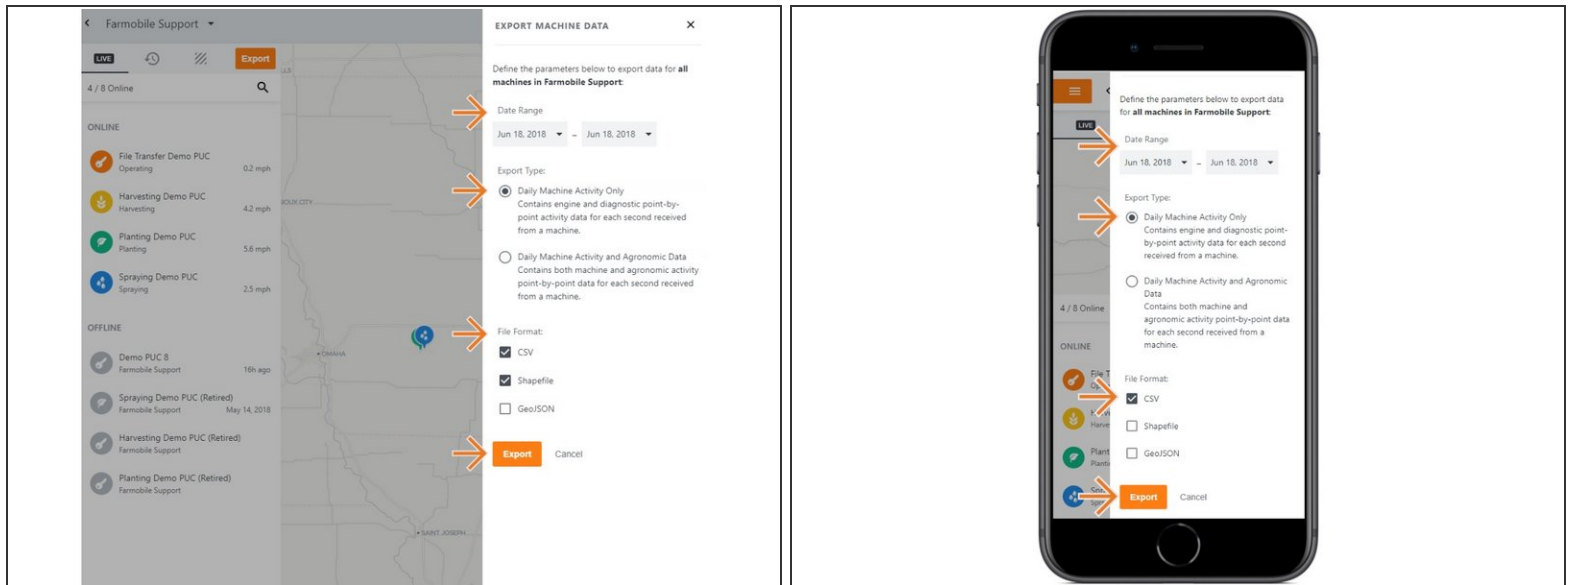


- Populate the Date Range. Can be a single day or multiple days.
- Select 'Daily Machine Activity Only' in the Export Type section.
- Check the box for each File Format you want to export.
- Each File Format requested will be delivered in separate compressed zip files.
- Select Export to request your data.
- Once the data is ready, you'll receive an email from Farmobile.

Step 4 — Receive Email Notification

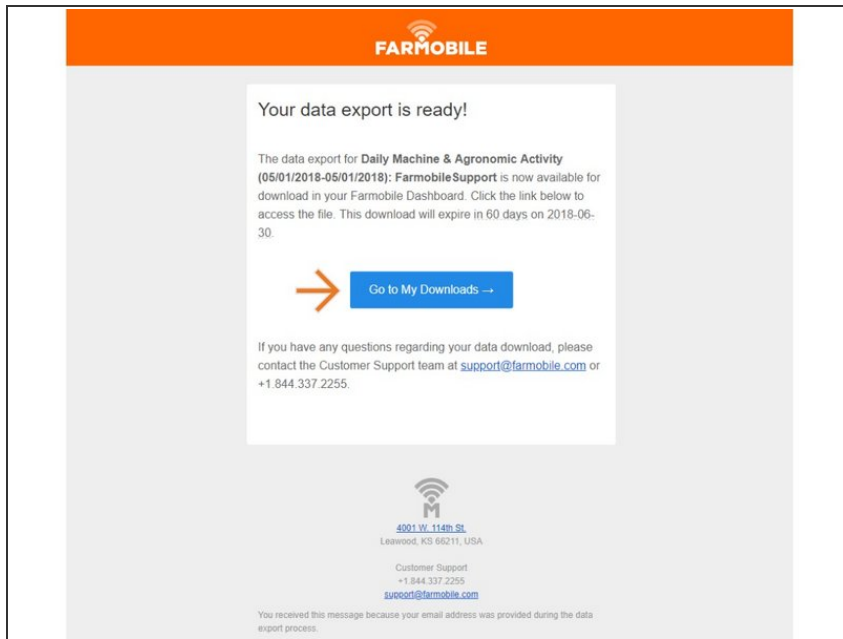

- Once the point-by-point data is ready, Farmobile will send you an email with the requested File Name listed and a link to the Farmobile DataEngine Download page.
- At this point, your requested file is listed in the Farmobile DataEngine Download page for you to download.
- Select the Got to My Downloads -> button to open Farmobile DataEngine and download your file.

Step 5 — Download the File

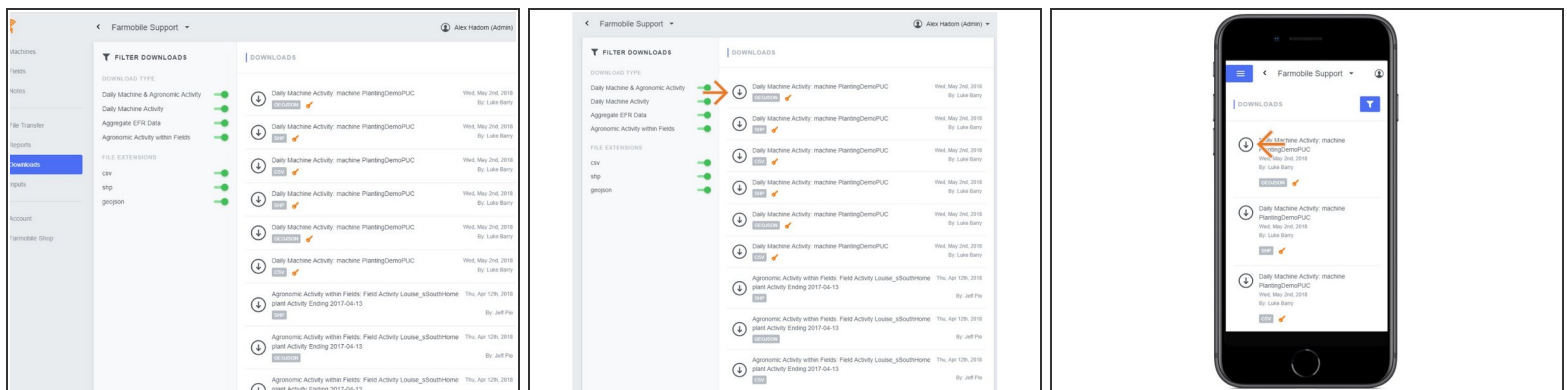

- Your file is listed in the Downloads page of Farmobile DataEngine.
- The list is sorted by date requested, so your most recent exports are listed at the top.
- Select Download to download the zip file.