



# Live - Multiple Machines

View multiple machines live, and display interactive heatmaps of your choice.

Written By: Support

The screenshot displays the Farmobile mobile application interface. At the top, it shows a navigation bar with a back arrow, the text 'Farmobile Support', and a user profile icon for 'Alex Hadorn (Admin)'. Below the navigation bar is a sidebar menu with various options like 'Machines', 'Jobs', 'Reports', etc. The main content area is divided into two sections. On the left is a 'LIVE' dashboard for three machines, and on the right is a heatmap map.

**Machine 1: Harvesting Demo PUC (Harvesting)**

Wet Yield	Dry Yield	Speed
286.1 bu/ac	274.9 bu/ac	3.4 mph

Progress bars are shown below each metric, with a scale from 10 bu/ac to 400 bu/ac for Wet Yield.

**Machine 2: Planting Demo PUC (Planting)**

Ave Pop	Targ Pop	Speed
0 kseeds/ac	30 kseeds/ac	4.1 mph

Progress bars are shown below each metric, with a scale from 0% to 100% for Eng Torque.

**Machine 3: Spraying Demo PUC (Spraying)**

Spray Rate	Targ Rate	Speed
9.0 gal/ac	9.0 gal/ac	13.9 mph



Progress bars are shown below each metric, with a scale from 0 mph to 70 mph for Speed.

The heatmap map on the right shows a yellow path representing the machine's location and movement. A green area on the map indicates the current machine's activity, with three colored pins (yellow, green, blue) marking specific points of interest.

## INTRODUCTION


- While active, your live PUCs will display an interactive heatmap on the map.
- Once you zoom the map in close enough, the PUC menu will expand and display three attribute cards.
- The card being mapped is marked by a green icon.
- You can select a different attribute card at any time for any machine to view it on the map in real time.
- You control what three attribute cards are displayed, and the available menu quickly lets you toggle on different attributes to display.

## Step 1 — Select Machines from the Farmobile DataEngine<sup>SM</sup> Menu

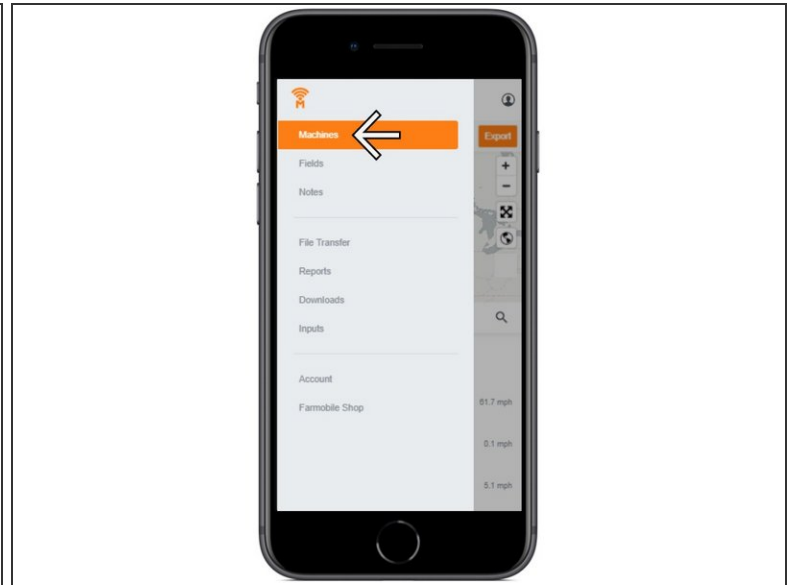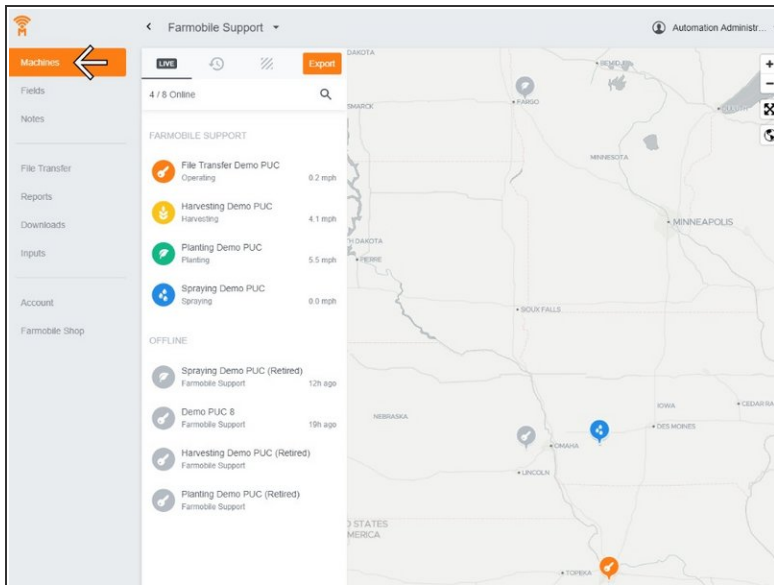



- Selecting Machines from the Farmobile DataEngine menu will open the Machines page with all of your PUC<sup>TM</sup> listed and displayed on the map.

## Step 2 — Zoom in on the Map

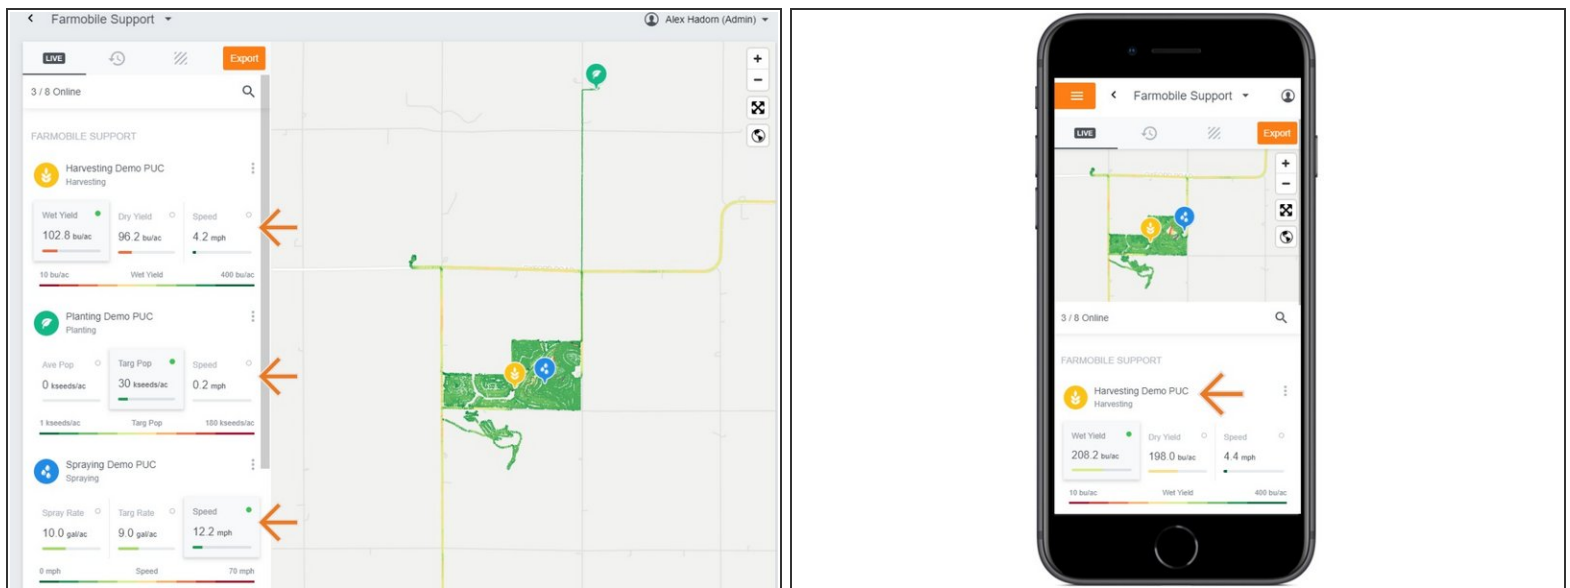



- Zoom the map in closer to your live Machines.
- As your map gets closer, the list of PUCs will expand to display three live attribute cards.
- The green icon indicates which attribute card is currently being displayed on the map.
- The map legend is located directly under the attribute cards.
- At any time, you can select a different attribute card for each machine to view the live heatmap.

## Step 3 — Open Attribute Window

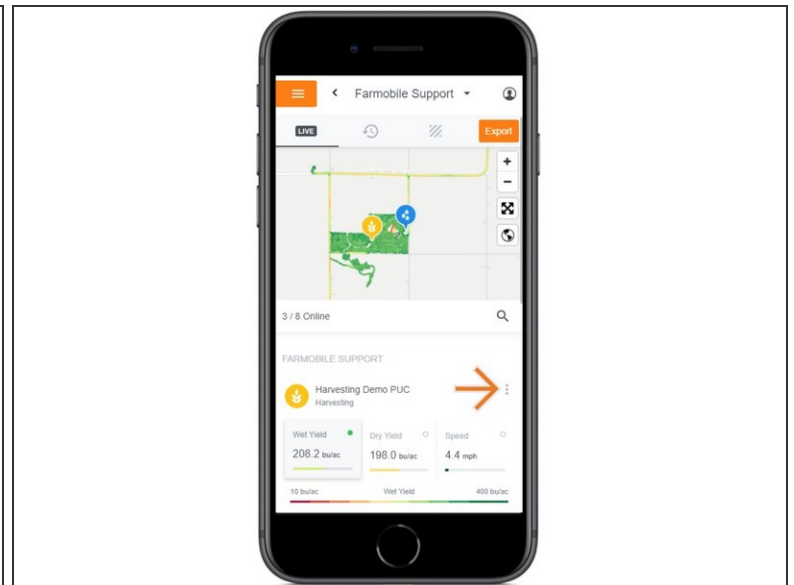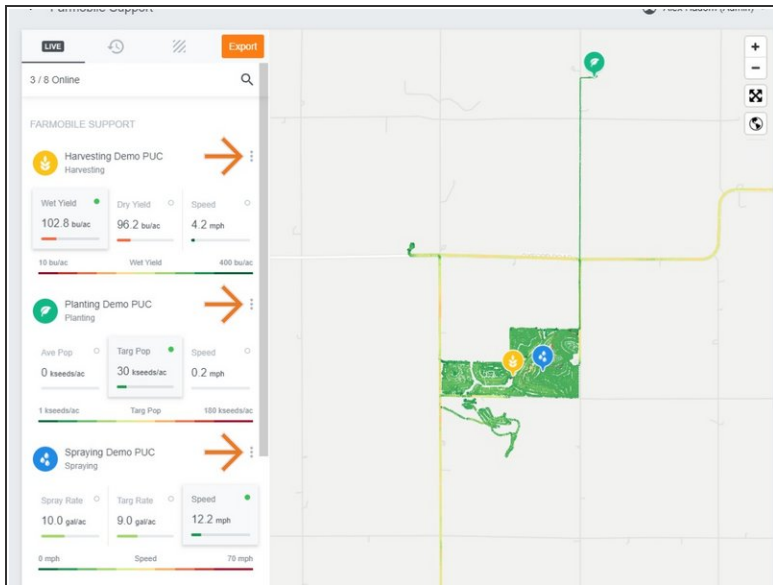

- Select the ellipse button by the PUC name to open the attribute menu.
- You control what three attribute cards are displayed!

## Step 4 — View Different Attributes

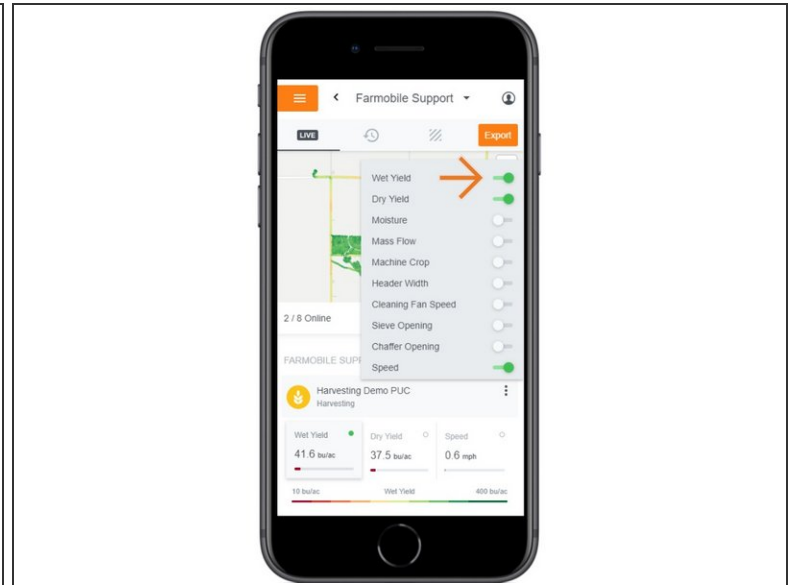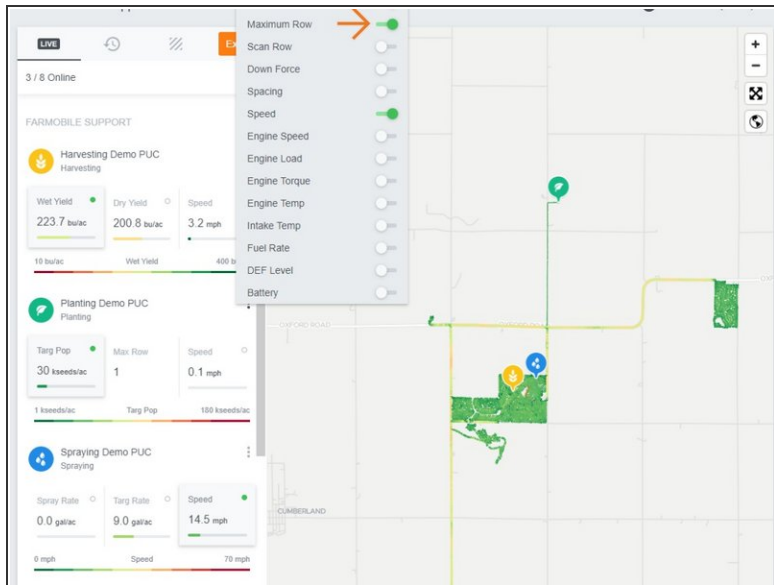

- Enabled attributes are toggled on in Green.
- Select a different attribute to view it live.
- You can choose and view three attribute cards at a time.
- When you toggle on a new attribute, a previously selected attribute will toggle off.
- **Mobile:** For mobile you can select the Full Extent button (located directly under Zoom In / Zoom Out buttons) to view the map and legend in full extent.

This document was last generated on 2019-07-23 05:28:21 PM.