 




# How to change front hub endcaps - XCX+, TRS+ and LG1+

Easy endcap swaps on all front hubs

Written By: The Hive - Jeremy

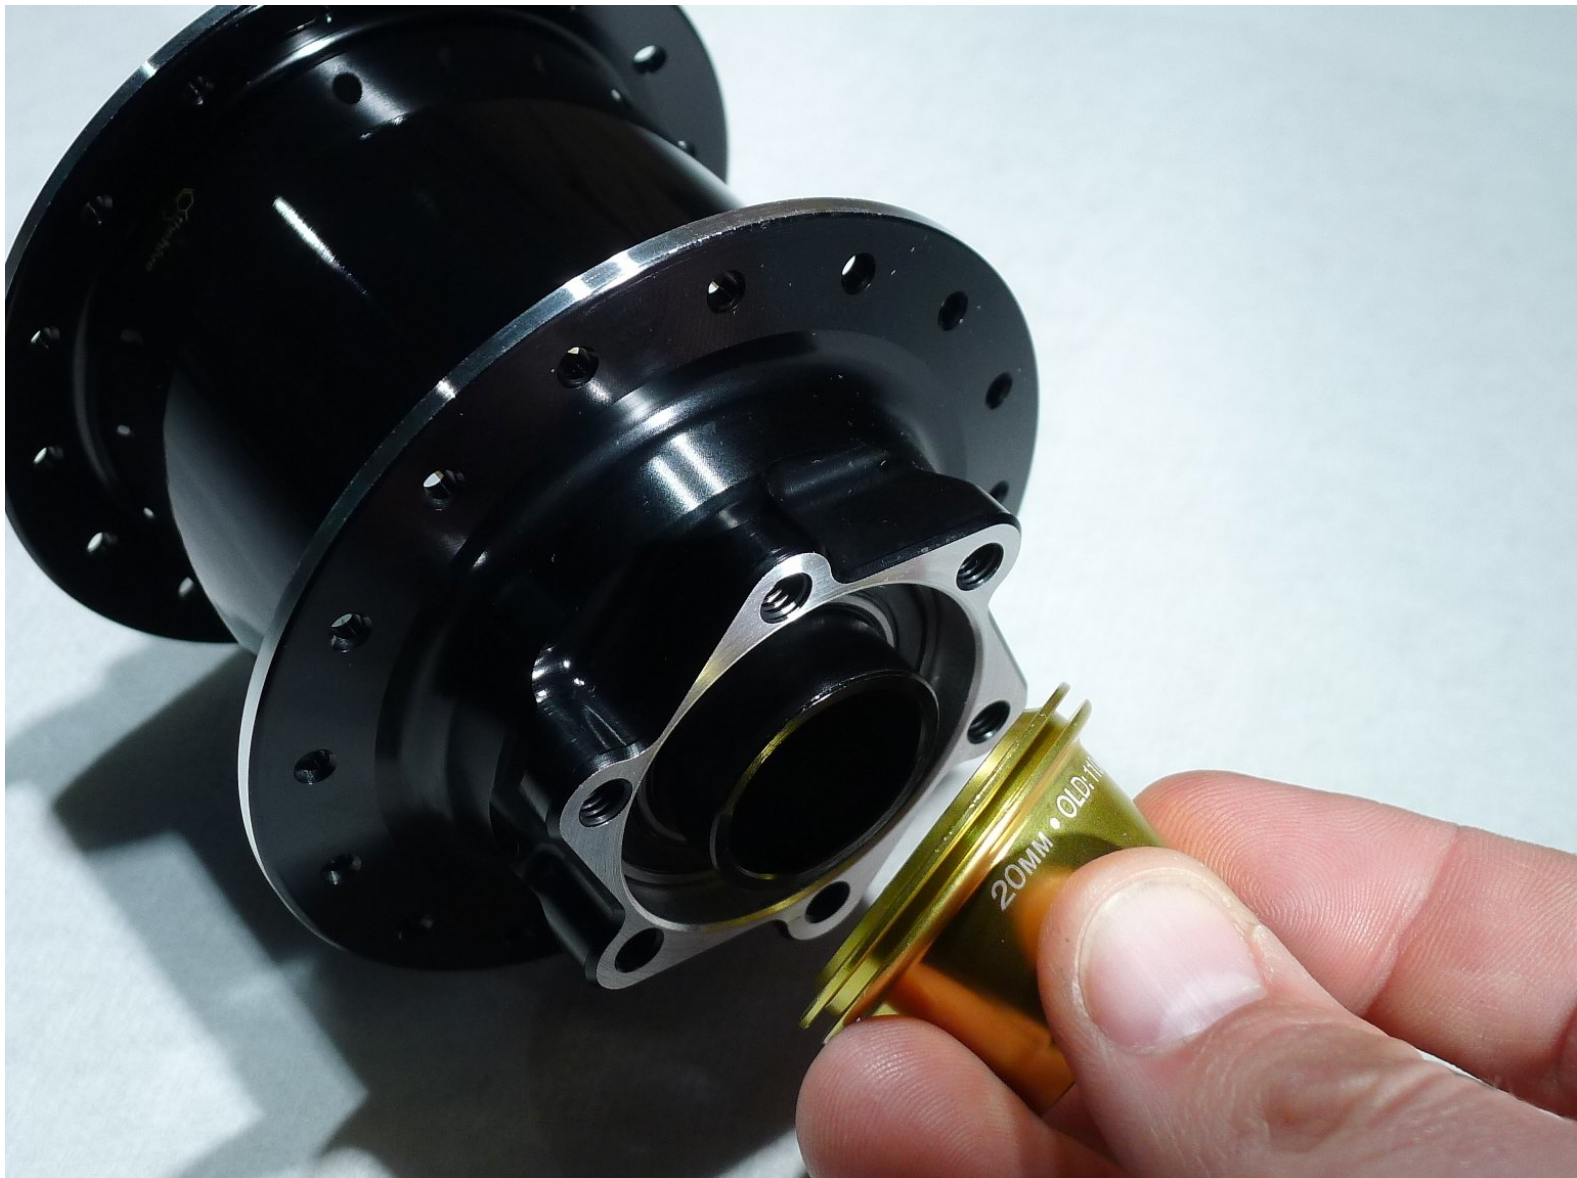



## PARTS:

 
 
- [grease](#) (1)
-

## Step 1 — How to change front hub endcaps - XCX+, TRS+ and LG1+



- **Available endcaps**
  - XCX hubs
    - 9mm QR
    - 15mm thru axle
  - TRS and LG1 hubs *same endcaps used on both hubs*
    - 9mm QR
    - 15mm thru axle
    - 20mm thru axle

## Step 2

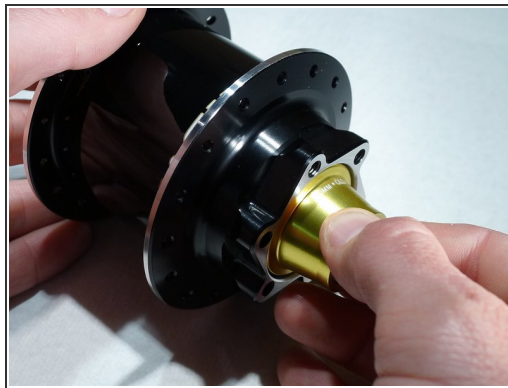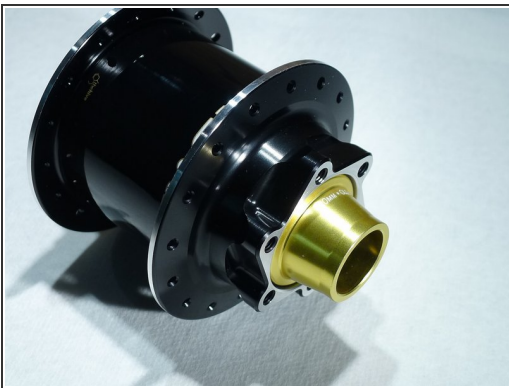

- Remove the endcap by pulling firmly on it
- Rocking the endcap side to side can help loosen it

### Step 3



- Lightly grease the O-ring on the endcap before reinstalling

Thanks for reading, now get out there and ride!