




iMac Intel 20" EMC 2105 and 2118 RAM Installation

Written By: Dozuki System

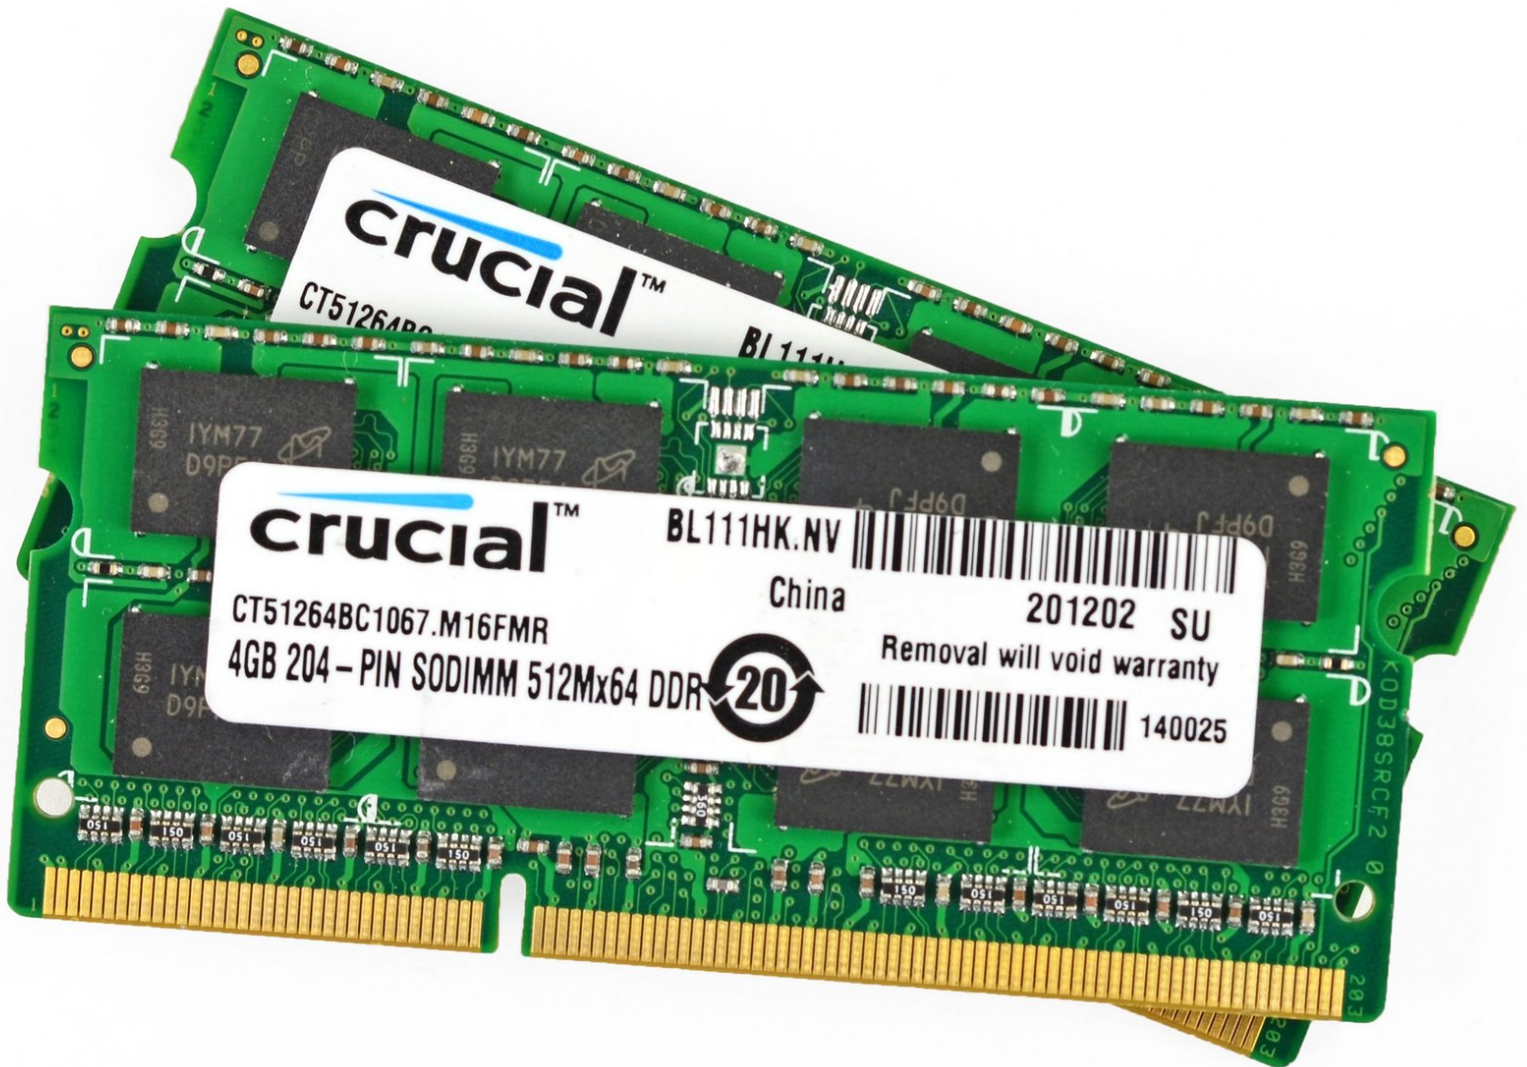

INTRODUCTION

Upgrade your RAM for an instant increase in speed.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [RAM Upgrade Kit](#) (1)
-

Step 1 — Access Door

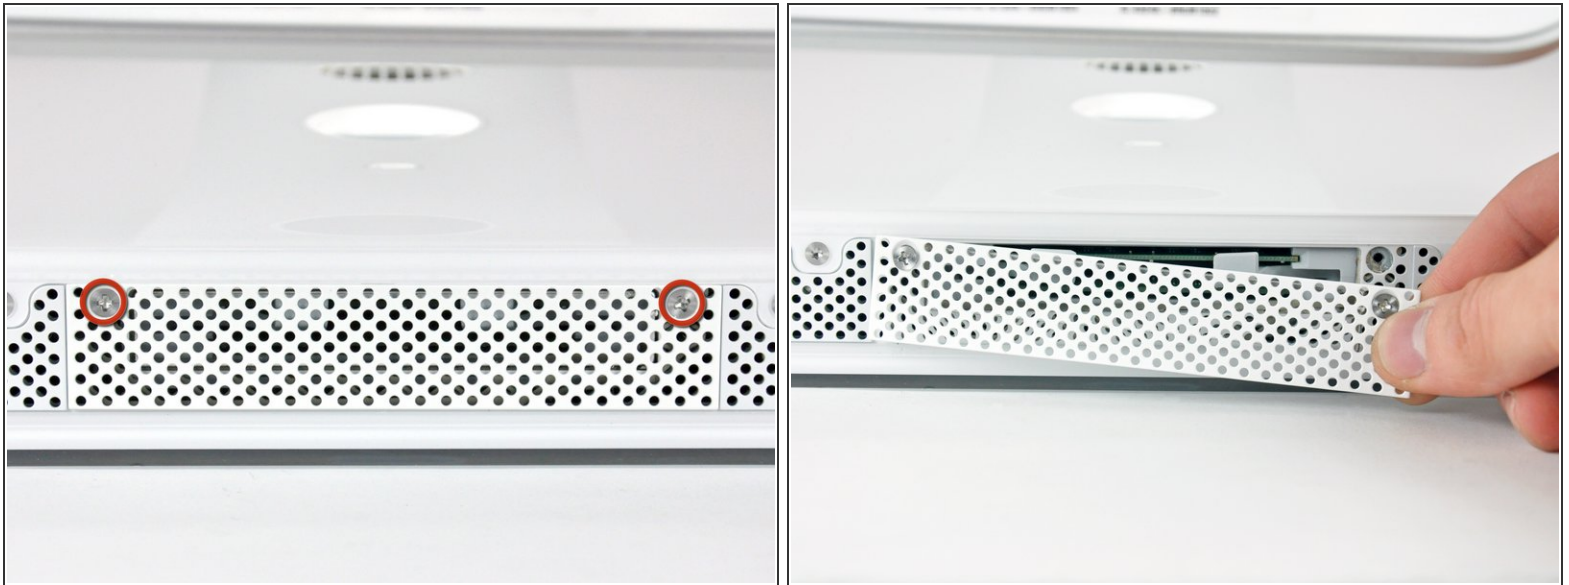

- Loosen the two Phillips screws securing the access door to your iMac.
- ⓘ Both screws remain captive within the access door.
- Remove the access door.

Step 2 — RAM Installation



- Pull both RAM arms away from the iMac to release both RAM chips from their sockets.

Step 3



- Pull both RAM modules out of their slots.
- ⓘ During reinstallation, make sure both RAM arms are fully rotated outward before inserting the RAM modules. Use your thumbs to seat the new RAM modules into their sockets and then press the RAM arms back into the iMac.
- ⓘ It is normal to encounter a fair amount of resistance when pushing the RAM arms back into the iMac.

To reassemble your device, just follow these instructions in reverse order.

This document was last generated on 2019-07-08 05:46:22 PM.