



Labels and T&P Install

Written By: Kristen Sowatsky



BRADFORD WHITE[®]

C O R P O R A T I O N

INTRODUCTION

Plant: Middleville

Product: 50 Gallon and 80 Gallon Models

Area: HPWH

Step 1 — Labels and T&P Install



- Move Completed Unit onto Assembly Line (Carousel)

Step 2



- Remove Manifest and Place Magent into Tote

Step 3




- Scan Manifest / Scan New Paperwork (Label)

Step 4




- Discard old paperwork into trash

Step 5

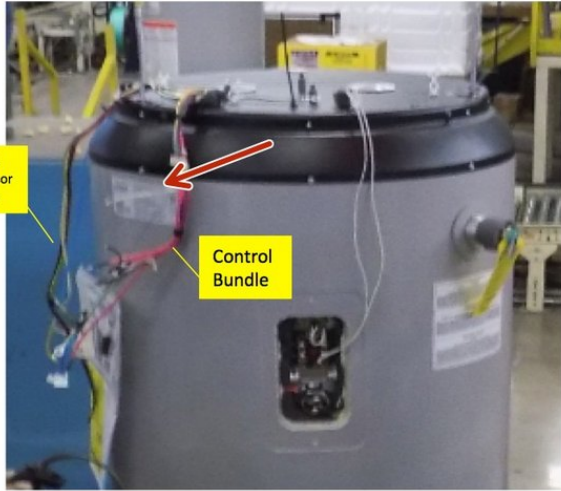


- Remove Label from New Paperwork, Install to upper left side of Jacket

Step 6

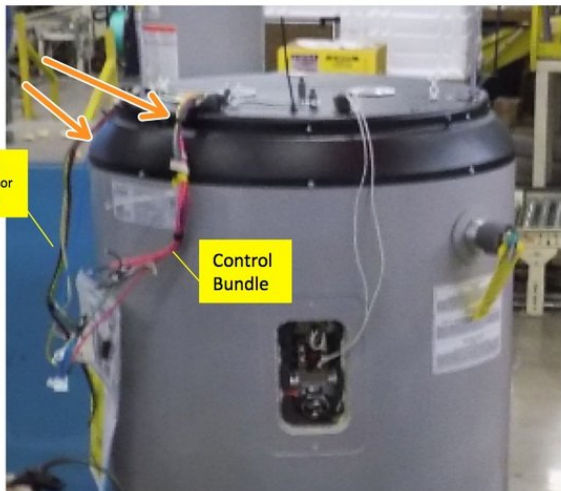

- Separate and Untwist Bundled Cords. J-Box & Compressor on Left and Control Bundle on Right

Step 7

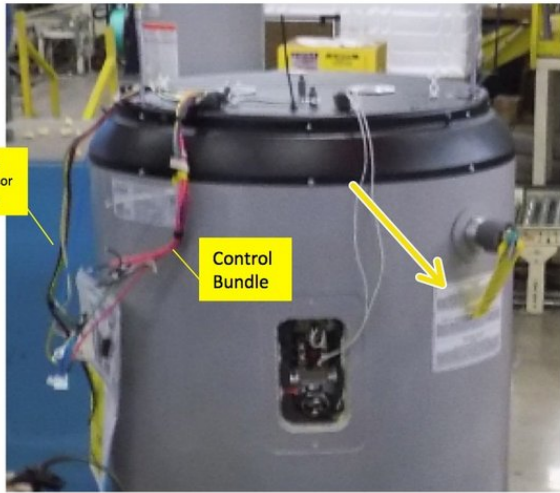

- Get / Intall Label under T&P Escuteceon

Step 8



- Get Paperwork and Magnet from Tote and Attach to Left Side of Jacket.

Step 9



- Hand Thread T&P into Spud, Secure with DC Tool Driver.

Step 10



- Install T&P Foam Installation and Secure with Tape.